
ZUZIX
Smart Tech, Warm Paws.

Quick Start Guide


P1 Smart Automatic Cat Litter Box

Smart Life APP

Package Contents

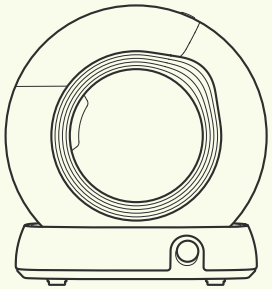

P1 Smart Automatic Litter Box × 1

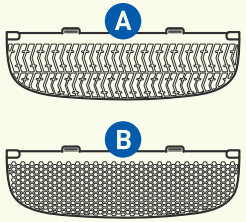


Filter Screens
(Type -A and Type -B) × 1 each



Power Adapter × 1




Litter-Guard × 1



Deodorizing Gel × 1



Leak-proof Tray × 1

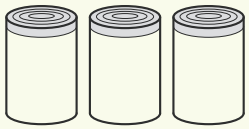

Waste-Bag Rolls
(15 bags per roll) × 3

User Manual × 1

Quick Start Guide × 1

Troubleshooting

Problem	Solution
Cannot connect to Wi-Fi	1. Turn on Bluetooth on your phone. 2. Confirm the selected Wi-Fi network and password. 3. Connect your phone to a 2.4 GHz Wi-Fi network. 4. Move the product closer to the router and make sure the Wi-Fi signal is strong.
The product stops unexpectedly while rotating	Unplug the product, move it to a hard, flat, level floor, and plug it back in.
The drum shifts or bounces while rotating	Remove the drum, reinstall it as directed, and secure it with the drum latch.
The drum does not rotate	1. Remove the drum, reinstall it as directed, and secure it with the drum latch. 2. Remove any object blocking the drum.
The product does not clean automatically	1. Turn on Auto-Clean mode using the product controls. 2. Turn on Auto-Clean mode in the app.
The drum does not stop when a cat enters	A kitten weighing less than 1.8 lb (800 g) may not activate the weight sensors. Do not allow kittens weighing less than 2.2 lb (1 kg) to use this product.
Excessive litter or urine leakage	1. Install the litter pad in the direction shown and make sure its entire edge is inserted into the leak-proof groove. 2. If the pad frame is slightly deformed, carefully reshape it by hand. 3. Contact the seller to purchase a replacement litter pad.
A large amount of litter spills during cleaning	1. Add litter only up to the MAX line on the litter pad. 2. Install the filter screen that matches your litter type.
High-pitched rubbing noise during operation	1. Make sure the rollers on the base rotate freely. 2. Check the drum and base for improper contact or rubbing.
The waste bin lid will not close or latch	Adjust the folded edge of the waste bag so it does not block the latch slot, then close the lid again.
Debris has fallen into the space between the waste bin and the waste bag.	1. Make sure the magnetic retaining ring secures the waste bag completely around the opening. 2. Check the waste bag for tears or damage.
During cleaning, a large amount of waste rushed out of the waste inlet.	Replace the waste bag promptly.
The waste inlet door will not close	1. A bag that is too thick or stiff may block the waste inlet door. Replace it with an original waste bag designed for this product. 2. Remove any object blocking the waste inlet door.
A large amount of litter spills from the drum during dumping	1. Install a new waste bag. 2. Make sure the drum does not contain an excessive amount of litter.
Waste bin is dump, but the Full indicator is on	This occurs if you replaced the waste bag without running the "Replace Bag" function. The waste-bin-full indicator light will turn off and the counter will reset only after you run the "Replace Bag" function.
Cleaning or dumping cycle cannot be canceled	Wait until the cycle finishes. Once the drum has traveled more than half-way, the cycle cannot be aborted.

For optimal experience, please read the following carefully before initial use.

ZUZIX
Smart Tech, Warm Paws.

Quick Start Guide

P1 Smart Automatic Cat Litter Box

Smart Life APP


Setup Instructions

Step 1




Open the box. Remove the Quick-Start Guide and accessory bag, then verify that all accessories are included.

Step 2

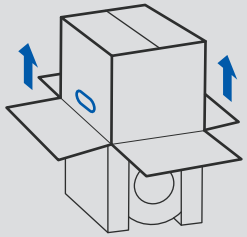


Turn the box upside-down. Hold the box handles and lift the box upward to uncover the product. Remove all protective tape.

Step 3

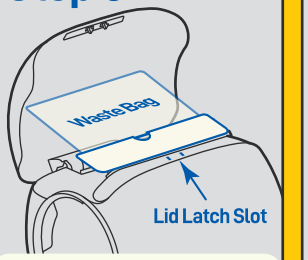


Open the waste-bin and make sure a waste bag is installed. Confirm that the bag does not cover the lid-latch slot so the lid can close securely.

Step 4

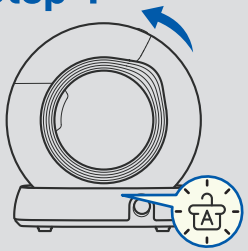

Plug in the product. When the self-test is completed, the Auto-Clean indicator will turn on and the product will be ready for use.

Step 5

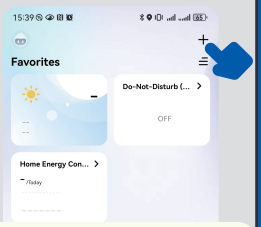


Scan the QR code to install the Smart-Life App, then follow the on-screen instructions to connect the product to Wi-Fi.

Step 6




Remove the round protective cover from the vent on the back of the drum. Open the Deodorizing-gel package, place the gel inside the vent, and reinstall the cover.

Step 7

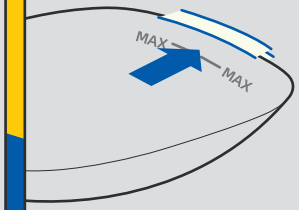

Check the litter pad and make sure its entire outer edge is inserted into the leak-proof groove in the drum.

Step 8

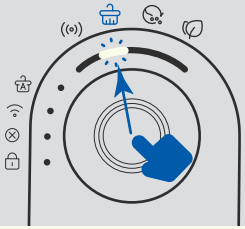

Add the appropriate amount of litter to the drum. Select Clean / Level, then press and hold the knob to level the litter. After leveling, make sure the litter does not exceed the MAX line on the litter pad.

Safety Instructions



⚠ Do not use the automatic or scheduled cleaning modes for kittens weighing less than 2.2 lb (1 kg).



⚠ Do not drag or drop hard the product. When moving the unit, lift and set it down gently.



⚠ Do not use the product in damp areas or place it in direct sunlight.



⚠ Place the product on a hard, flat, level floor with 2–4 in (5–10 cm) of clearance on all sides.

2.4GHz WiFi

⚠ Place the product near your router where the Wi-Fi signal is strong. Turn on your phone's Bluetooth and connect it to a 2.4 GHz Wi-Fi network.

For optimal experience, please read the following carefully before initial use.