
ZUZIX

Smart Tech, Warm Paws.

www.zuzixpet.com

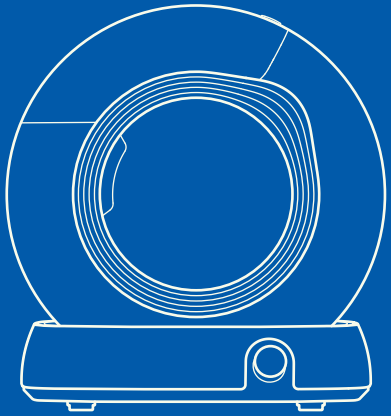

PawsOff P1

Smart Automatic Cat Litter Box

User Manual

01

Safety Instructions

Safety Instructions

WARNING: Failure to follow these safety guidelines could lead to product failure, property loss, or serious safety hazards.




Do not drag or drop hard the product. When moving the unit, lift and set it down gently.




Do not rinse, soak, or submerge the base in water. If the base accidentally becomes wet during cleaning, wipe it dry immediately to avoid damage to the electrical components.



Only use the power adapter included with this product to prevent product damage or safety hazards.

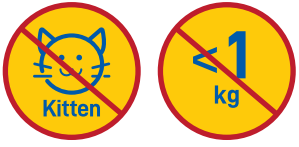

Do not use the automatic or scheduled cleaning modes for kittens weighing less than 2.2 lb (1 kg) or for nursing cats.

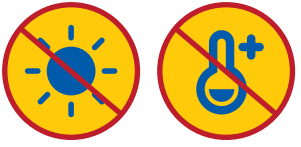


For indoor-use only. Keep it away from high temperatures, high humidity, and direct sunlight.


02

Package Contents and Product Overview

Package Contents

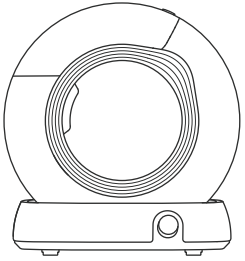

P1 Smart Automatic Litter Box × 1



Filter Screens
(Type-A and Type-B) × 1 each




Power Adapter × 1




Litter-Guard × 1



Deodorizing Gel × 1



Leak-proof Tray × 1




Waste-Bag Rolls
(15 Bags per roll) × 3


User Manual × 1

Quick Start Guide × 1

Product Structure

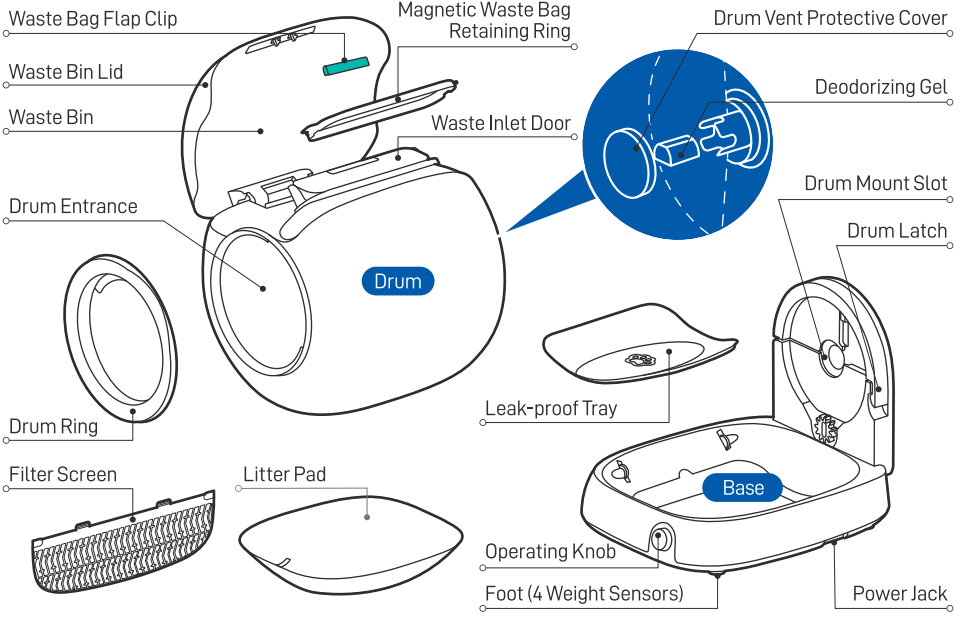

Control Knob Instructions

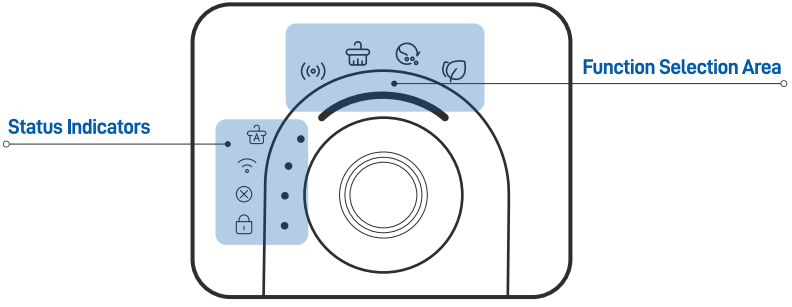

Function selection area:
Turn the knob to select a function, then press to confirm.

Auto/ Connect	Clean/ Level	Litter Dump	Deodorize/ Replace Bag

Status indicators:
Displays product status.

Auto-Clean Indicator	Wi-Fi Indicator	Error Indicator	Child Lock Indicator

Instructions for Buttons And Lights

Icon	Function	Knob Action	Indicator	Beep
Auto/ Connect to Wi-Fi	Turn Auto-Clean On/Off	Select, then press	On/Off	One short beep
	Connect to Wi-Fi	Select, then press and hold for 1 second	Flashes Blue	One 2-second beep
Clean/Level	Cleaning	Select, then press	Corresponding white light flashes	One short beep
	Cancel Cleaning	While cleaning, press the knob at any position to cancel the cycle and return the drum to its home position	Corresponding white light flashes	One short beep
	Level Litter	Select, then press and hold for 1 second	Corresponding white light flashes	One short beep
Dump	Litter Dump	Select, then press and hold for 1 second	Corresponding white light flashes	One short beep
	Cancel Dumping	While dumping, press the knob at any position to cancel the cycle and return the drum to its home position	Corresponding white light flashes	One short beep
Deodorize/ Replace Bag	Deodorize	Select, then press	Corresponding white light flashes	One short beep
	Replace Bag	Select, then press and hold for 1 second	Corresponding white light flashes	One short beep
	Reset Product	Press the knob five times at any position	Indicators return to normal	One 2-second beep
	Turn Child Lock On/Off	Press the knob three times at any position	Blue On/Off	One short beep
	Wake From Sleep Mode	While in Sleep Mode, press the knob three times at any position	Indicators return to normal	/
	Weight Sensor Activated	/	Flashes White	/

03


Before First Use


Check the Product and Accessories


Remove the product and accessories from the box and make sure all items are included (see Package Contents). Remove all protective tape from the product before use.

Position the Product Correctly

1. Place the product on a hard, flat, level floor. Make sure there are no objects underneath it.
2. Make sure the product does not lean against or touch any walls or surrounding objects. Do not place anything on top of it.
3. Place the product within range of your Wi-Fi router and away from appliances that may cause wireless interference.
4. This product is for indoor use only.
5. If your product includes optional accessories, install and secure them as directed.

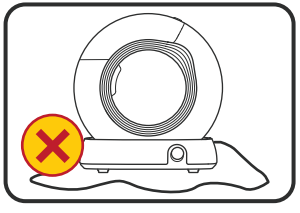

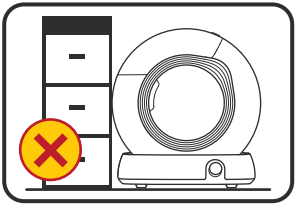

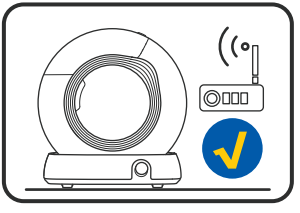


Power On and Run the Self-Test

1. When the product is plugged in, it will beep and begin a self-test. Wait for the self-test to finish before continuing.
2. Route the power cord into the cord-retention slot beside the power port to prevent accidental disconnection.
3. After the self-test completes, the unit will level the litter.

Connect to Wi-Fi

1. Scan the QR code, or open your device's app store to download and install the "Smart Life"app.
2. Open the app, create an account or sign in, and wait for the home screen to detect the "P1 Smart Automatic Litter Box." Tap Add and follow the on-screen instructions to connect the litter box to Wi-Fi.
3. When the connection is successful, the Wi-Fi indicator will remain solid blue.
4. If the app does not detect the product automatically, connect it manually. Turn the knob to ((•)) Auto/Connect, then press and hold it. Release the knob after you hear a long beep and the blue Wi-Fi indicator begins flashing rapidly. Follow the instructions in the app to complete setup.
5. If the connection fails, confirm that you are using the correct Wi-Fi band and password. Check the router status and signal strength, then try again.

Smart Life App

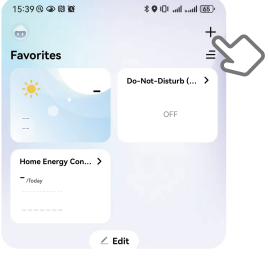



2.4GHz WiFi

Important: Your phone must be connected to a 2.4 GHz Wi-Fi network. The product does not support 5 GHz networks or networks that require a web-based sign-in, such as those in hotels and airports. Turn on Bluetooth and allow location access on your phone.

Add Litter


1. Before adding litter, make sure the litter pad is installed correctly.
2. This product is compatible with tofu litter (3 mm or smaller in diameter), mixed litter, bentonite clay litter, and mineral litter.

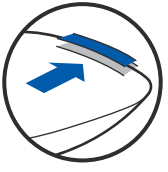

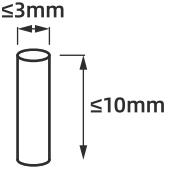


Important: Insert the entire outer edge of the litter pad into the leak-proof groove in the drum. Do not use non-clumping litter, large-grain litter, or pellet-shaped litter longer than 10 mm.

3. Install the correct filter screen for your litter type, then select that litter type in the app for best performance.
4. Add litter through the Drum Entrance. Keep the litter at the recommended level during daily use to help prevent clumps from sticking to the bottom.
5. After adding litter, turn the knob to Clean/Level, then press and hold it to level the litter. After leveling, make sure the litter does not exceed the MAX line on the litter pad.

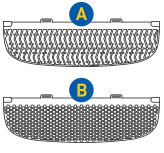

Filter Screen A:
Suitable for tofu litter and mixed litter.

Filter Screen B:
Suitable for bentonite litter and mineral litter.

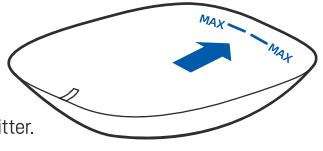



Install or Replace the Waste Bag


1. A waste bag is preinstalled at the factory.
2. To replace a used waste bag, turn the knob to Deodorize/Replace Bag, then press and hold it. The product will automatically move the waste bin into the bag-replacement position. When it stops, open the waste bin lid and replace the bag.
3. Remove the waste bag flap clip. Lift out the magnetic waste bag retaining ring together with the used bag, then install a new waste bag.
4. Insert the new waste bag through the magnetic waste bag retaining ring in the direction shown.
5. Fold the top edge of the waste bag outward over the entire magnetic waste bag retaining ring.
6. Align the magnetic waste bag retaining ring with the magnets on the waste bin. Make sure both sides are fully attached and the folded edge of the bag is secured all the way around.
7. Install the waste bag flap clip. Make sure the folded edge of the bag does not block the waste bin latch slot. Smooth the back of the bag, confirm that the waste inlet door opens and closes freely, then close the waste bin lid.


Attention:

1. The magnets on the waste bag retaining ring must face the waste bag opening. Do not fold too much of the bag over the ring, as this may interfere with the waste bin latch slot.
2. You must run the Replace Bag function to reset the waste-level counter. The Waste Bin Full indicator will then turn off and begin a new count.

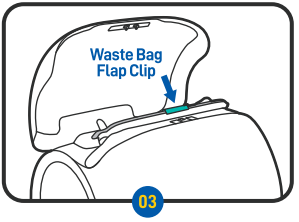
Waste Bag
Flap Clip
03

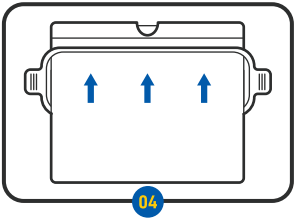
04

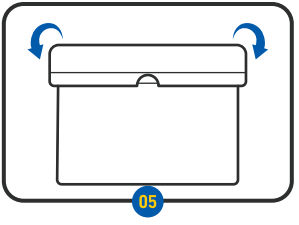
05

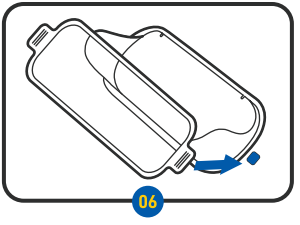
06

04


Cleaning the Product


Litter Dump


1. Fit a new waste bag prior to dumping litter.
2. Turn the knob to Litter Dump, then press and hold it. After the beep sounds, the indicator flashes white and the unit starts dumping. To cancel while the cycle is running, select Litter Dump and press the knob again.
3. Once the dumping cycle finishes, the unit automatically rotates to the bag-replacement position. Open the waste bin lid and remove the waste bag.


Clean the Product

1. After dumping old litter, unplug the product. Release the drum latch, then lift out the drum.
2. Remove the litter guard. Turn the drum ring to the unlocked position as marked, then remove it.
3. Gently pull the center of the filter screen outward so it bends, then remove it. Lift the handle on the litter pad and remove it.

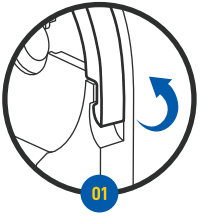


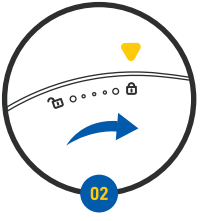


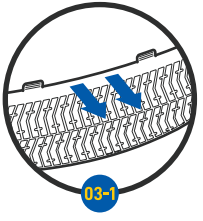


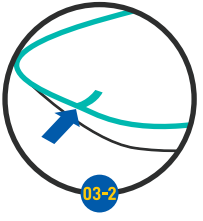

4. The drum and its removable parts may be washed with water. Never rinse or immerse the base because it contains electrical components. Wipe the base with a damp cloth only.
5. After cleaning, air-dry or wipe all parts completely dry. Reassemble the product, plug it in, and wait for the self-test to finish before adding litter and resuming use.
6. Dump old litter and clean the drum and base as needed for your household.

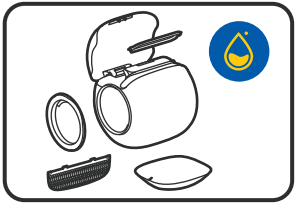

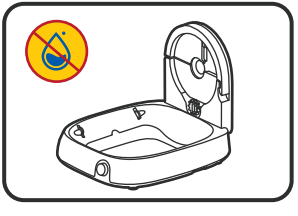

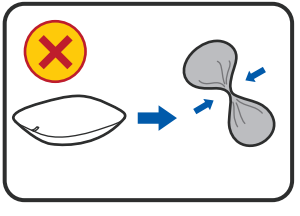

Attention: The litter pad is a wear item. During removal and installation, do not sharply bend or excessively compress its outer frame. Permanent deformation may create gaps between the pad and drum, causing litter or urine to leak. If the frame becomes deformed, carefully reshape it by hand or contact the seller for a replacement pad.

Suggestion: For one cat, replace the waste bag every three days during hot weather. Thoroughly clean the product every one to three months.

05

Troubleshooting and Product Specifications

Problem	Solution
Cannot connect to Wi-Fi	1. Turn on Bluetooth on your phone. 2. Confirm the selected Wi-Fi network and password. 3. Connect your phone to a 2.4 GHz Wi-Fi network. 4. Move the product closer to the router and make sure the Wi-Fi signal is strong.
The product stops unexpectedly while rotating	Unplug the product, move it to a hard, flat, level floor, and plug it back in.
The drum shifts or bounces while rotating	Remove the drum, reinstall it as directed, and secure it with the drum latch.
The drum does not rotate	1. Remove the drum, reinstall it as directed, and secure it with the drum latch. 2. Remove any object blocking the drum.
The product does not clean automatically	1. Turn on Auto-Clean mode using the product controls. 2. Turn on Auto-Clean mode in the app.
The drum does not stop when a cat enters	A kitten weighing less than 1.8 lb (800 g) may not activate the weight sensors. Do not allow kittens weighing less than 2.2 lb (1 kg) to use this product.
Excessive litter or urine leakage	1. Install the litter pad in the direction shown and make sure its entire edge is inserted into the leak-proof groove. 2. If the pad frame is slightly deformed, carefully reshape it by hand. 3. Contact the seller to purchase a replacement litter pad.
A large amount of litter spills during cleaning	1. Add litter only up to the MAX line on the litter pad. 2. Install the filter screen that matches your litter type.
High-pitched rubbing noise during operation	1. Make sure the rollers on the base rotate freely. 2. Check the drum and base for improper contact or rubbing.
The waste bin lid will not close or latch	Adjust the folded edge of the waste bag so it does not block the latch slot, then close the lid again.
Debris has fallen into the space between the waste bin and the waste bag	1. Make sure the magnetic retaining ring secures the waste bag completely around the opening. 2. Check the waste bag for tears or damage.
During cleaning, a large amount of waste rushed out of the waste inlet	Replace the waste bag promptly.

Problem	Solution
The waste inlet door will not close	1. A bag that is too thick or stiff may block the waste inlet door. Replace it with an original waste bag designed for this product. 2. Remove any object blocking the waste inlet door.
A large amount of litter spills from the drum during dumping	1. Install a new waste bag. 2. Make sure the drum does not contain an excessive amount of litter.
Waste bin is dump, but the Full indicator is on	This occurs if you replaced the waste bag without running the "Replace Bag" function. The waste-bin-full indicator light will turn off and the counter will reset only after you run the "Replace Bag" function.
Cleaning or dumping cycle cannot be canceled	Wait until the cycle finishes. Once the drum has traveled more than half-way, the cycle cannot be aborted.

Product Specifications

Product name: P1 Smart Automatic Cat Litter Box
Model: TPCBP-01
Product dimensions: 18.9 (W) × 20.7 (D) × 19.7 (H) in (480 × 525 × 500 mm)
Package dimensions: 19.7 (W) × 21.3 (D) × 21.1 (H) in (500 × 540 × 535 mm)
Net weight: 15.9 lb (7.2 kg)
Gross weight: 22.0 lb (10 kg)
Rated voltage: 12V⎓
Rated power: 18 W

06

Limited Warranty

Regional Sales and Warranty Policy

To protect customers and authorized regional distributors, products purchased through unauthorized channels may not qualify for warranty service. Purchase this product only from an authorized seller.

ONE-YEAR LIMITED WARRANTY

Teamwork Tech Inc. warrants to the original purchaser located in the United States that this product shall be free from defects in materials and workmanship under normal household-use conditions for one (1) year from the original date of purchase.

What This Warranty Covers
This limited warranty covers defects in materials and workmanship that arise during normal use of the product in accordance with the user manual.

What We Will Do
If a covered defect is confirmed during the warranty period, Teamwork Tech Inc., at its option, will repair the product, replace it with the same or a functionally equivalent product, or provide an appropriate refund. Replacement products or parts may be new or refurbished and will be covered for the remainder of the original warranty period or ninety (90) days from replacement, whichever is longer.

What This Warranty Does Not Cover
This warranty does not cover:
(a) normal wear and tear;
(b) consumable or replaceable items;
(c) cosmetic damage that does not affect operation;
(d) damage caused by accident, misuse, abuse, improper installation, improper cleaning, liquid exposure, pests, pets, fire, flood, power surge, or other external causes;
(e) use contrary to the user manual;
(f) unauthorized modification, disassembly, or repair;
(g) use with incompatible accessories or power supplies;
(h) products with altered, removed, or unreadable serial numbers;
(i) products purchased from an unauthorized seller or without valid proof of purchase.

How to Obtain Warranty Service
Contact Customer Support before returning the product. Provide your order number or proof of purchase, purchase date, product model, serial number, a description of the issue, and supporting photos or video when requested. Do not ship or return the product until you receive return authorization and instructions.

Shipping and Returns
Shipping-related responsibilities and the return destination will be provided with the return authorization. Products sent without prior authorization may be refused or shipped back to the sender. Remove personal items and follow all packing and shipping instructions provided by Customer Support.

Limitations
TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, TEAMWORK TECH INC. SHALL NOT BE LIABLE FOR INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF THIS PRODUCT. SOME STATES DO NOT ALLOW LIMITATIONS ON INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

State Law Rights
This limited warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and
(2)This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. Use only the supplied antenna.

IC Warning
This device complies with Industry Canada license-exempt RSS standard(s).
Operation is subject to the following two conditions:
(1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions
suivantes:
(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment .The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Cet équipement est conforme aux limites d'exposition au rayonnement du Canada établies pour un environnement non contrôlé. L'appareil peut être utilisé en condition d'exposition portable sans restriction.

CUSTOMER SUPPORT

For product questions, troubleshooting, replacement parts,
or warranty service, please contact:

Teamwork Tech Inc.

Address: 885 Enchantment Place, Milpitas CA 95035 USA
Email: support@zuzixpet.com
Support Hours: [Monday to Friday, from 9am-5pm, PACIFIC TIME]

**Please include your order number, purchase date,
product model, serial number, and a description of the issue.**

Designed in USA. Made in China.