

Soil Temp. Moisture EC Sensor

JW-S3S(Z11) RS485 Output



Beijing Jingelway Sci-Tech Co.,Ltd.

Add:3-201,Zhenguan International Park,No.7 Jinghai Road,Beijing,102600,China
Tel:86-13520127780 Website:www.jw-iot.com Email:info@jingelway.com

1. Product Introduction

JW-S3S(Z11) measures soil moisture content, EC and temperature. It sealed with resin packaged plastic body with sensing rods which can be insert directly into the soil with long time stability. The soil moisture output signal can be RS485, Analog Voltage or Analog Current. It can also be calibrated for specific soils. The sensor is applicable for science research, irrigation, greenhouse, smart agriculture etc.

2. Features

- Integrated with Soil Moisture, EC, Temperature measurement
- It can also be used for the conductivity of water and fertilizer integrated solution, as well as other
- The electrode is made of alloy material with special treatment, which can withstand strong external impact and is not easy to be damaged.
- Completely sealed, resistant to acid and alkali corrosion, and can be buried in soil or directly into water for long-term dynamic testing.High accuracy with excellent stability.
- High precision, fast response, good interchangeability, probe insertion design ensures accurate measurement and reliable performance.
- Perfect protection circuit and various signal output interfaces are optional.

3. Technical Parameters

Soil Temperature	Range: -40~80℃, Resolution: 0.1℃, Accuracy: ±0.5℃
Soil Moisture	Range:0~100% Resolution: 0.03%(0~50%), 1%(50~100%) Accuracy: 2%(0~50%), 3%(50~100%)
Soil EC (Conductivity)	Range: 0~20000us/cm Resolution: 10us/cm(0~10000us/cm), 50us/cm(10000~20000us/cm) Accuracy ±3%(0~10000us/cm), ±5%(10000~20000us/cm)
Conductivity temperature compensation	Built-in temperature compensation sensor, compensation range 0-50℃
Measurement principle and method	Moisture by FDR and EC by AC excitation
IP Ratings	IP68 immersion in water for long-term use
Operating environment	-40~85℃
Sensor Rod	PCB Sensing
Sensor Sealed	Epoxy resin
Installation	Surface or buried installation
Cable Length	2 meters, cable length can be customized on request
Dimension	35*11*114mm
Static Power Consumption	6mA@24V DC
Power Supply	3.6-30V/DC
Output	RS485 Modbus

4. Wiring Diagrams

RS485 Modbus

Red (V+): Power Supply +

Black (G): Power Supply -

Yellow (T+): RS485+/A/T+


White (T-): RS485-/B/T-

Green (SET): SETTING mode.

All RS485 communication parameters (Mosbus Slave Address, baudrate, parity, databits, stopbits) are set in internal register and can be saved when power down, the factory setting is ADDRESS=1, BAUDRATE=9600bps, PARITY=NONE, DATABITS=8bits, STOPBITS=1bit;

Sometimes you may FORGET the communication settings, In this case, you can connect the GREEN & RED wire together to PowerSupply+, black wire to PowerSupply-, then re-power up the sensor, then the sensor start-up with a fixed communication settings (we call it setting mode) ADDRESS=0, BAUDRATE=9600bps, PARITY=NONE, DATABITS=8bits, STOPBITS=1bit; Communicate with the sensor using this parameters and then set your desired communication parameters, then disconnect the green wire from PowerSupply+, then re-power up the sensor, and the sensor will communicate with your settings.

5. Dimension

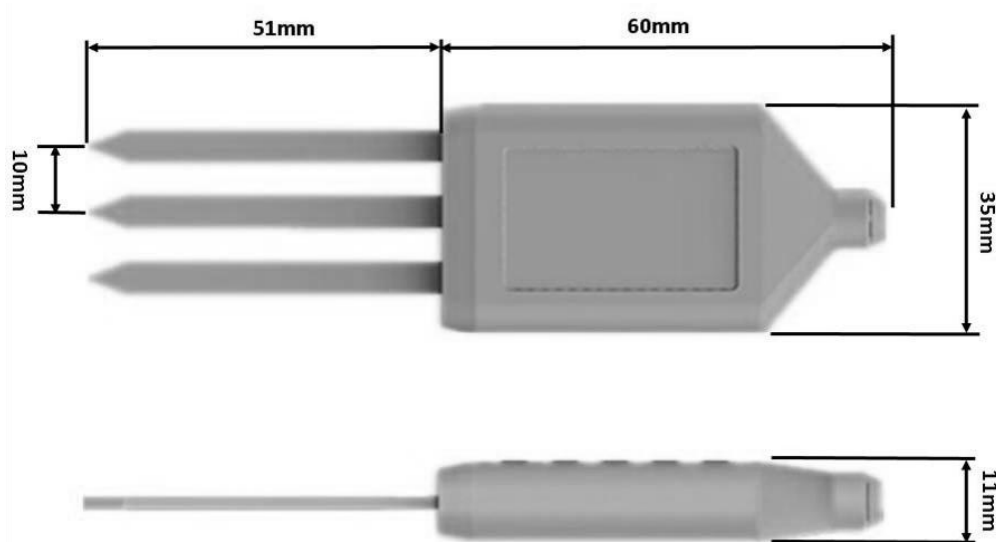

6. Safty, Care and Installation

6.1 Safety and Care

- The rods of the Sensor are sharp for ease insertion. Care must be taken and handling precautions followed.
- Avoid touching the rods or exposing them to other sources of static damage, particularly when powered up.
- Do not pull the sensor out of the soil by its cable.
- If you feel any resistance when inserting the sensor into soil, it is likely you have encountered a stone. Stop pushing and re-insert at a new location.

6.2 Installation

Surface installation

- Clear away any stones. Pre-form holes in very hard soils before insertion.
- Push the sensor into the soil until the rods are fully inserted. Ensure good soil contact.
- If you feel strong resistance when inserting the sensor, you have probably hit a stone. Stop, and re-insert at a new location.

Note: The sensor is suitable for soil surface temperature measurements.

Installing at depth

- Make a 45mm diameter hole, preferably at about 10° to the vertical using a auger.
- Push the sensor into the soil until rods are fully inserted. Ensure good soil contact.
- Fill and repack the hole with soil.

Alternatively

- Dig a trench, and install horizontally.

7. Output Signal Conversion

Output Interface	Parameters Range	Conversion Formula
RS485 Modbus-RTU	Temperature: -40-80°C	TEMP=(REGISTER VALUE)/100. When REGISTER VALUE=2013, then TEMP= 2013/100=20.13°C.
	VWC for all ranges	VWC=(REGISTER VALUE)/100. When REGISTER VALUE=2013, then VWC= 2013/100=20.13%.
	EC for all ranges	EC=(REGISTER VALUE). When REGISTER VALUE=1568, then EC= 1568us/cm.

8. Communication interface and Protocol

8.1 Modbus Protocol

Modbus Protocol is widely used to establish master-slave communication between intelligent

devices or sensors. A MODBUS message sent from a master to a slave contains the address of the slave, the function code (e.g. 'read register' or 'write register'), the data, and a check sum (LRC or CRC).

The sensor is RS485 interface with Modbus protocol. The default serial communication settings is slave address 1, modbus rtu, 9600bps, 8 databits and 1 stop bit. All communication settings can be changed with modbus command, and take effective after re-power up the sensor.

Following modbus function code are supported by sensor.

Modbus Function Code 0x03 : used for reading holding register.

Modbus Function Code 0x04 : used for reading input register.

Modbus Function Code 0x06 : used for writing single holding register.

Modbus Function Code 0x10: used for writing multiple holding register.

8.2 Modbus Registers

Parameters	Register Addr. (HEX/DEC)	Data Type	Modbus Function Code(DEC)	Range and Comments	Default Value
TEMPRATURE	0x0000 /0	INT16 RO	3/4	-4000~8000 for -40.00~80.00°C.	N/A
VWC-Volumetric Water Content	0x0001 /1	UINT16 RO	3/4	0-10000 for 0-100%	N/A
EC-Electrical Conductivity	0x0002 /2	UINT16 RO	3/4	0-20000 for 0-20000us/cm	N/A
SALINITY	0x0003 /3	UINT16 RO	3/4	0-20000 for 0-20000mg/L	N/A
TDS	0x0004 /4	UINT16 RO	3/4	0-20000 for 0-20000mg/L	N/A
EPSILON	0x0005 /5	UINT16 RO	3/4	88-8188 for 0.88-81.88	N/A
SOILTYPE	0x0020 /32	UINT16 R/W	3/6/16	0-3 0:Mineral 1:Sand 2:Clay 3:Organic	0:Mineral
TEMPUNIT	0x0021 /33	UINT16 R/W	3/6/16	0:°C 1:°F	0
ECTEMPCOFF	0x0022 /34	UINT16 R/W	3/6/16	0-100 for 0.0%-10.0%	20(2%)
SALINITYCOFF	0x0023 /35	UINT16 R/W	3/6/16	0-100 for 0.00-1.00	55(0.55)
TDSCOFF	0x0024 /36	UINT16 R/W	3/6/16	0-100 for 0.00-1.00	50(0.5)
MEASUREMETHOD	0x0025 /37	UINT16 R/W	3/6/16	0: Continuous Meas. 1: Request Meas.	1

SLAVEADDRESS	0x0200 /512	UINT16 R/W	3/6/16	0-255	1
BAUDRATE	0x0201 /513	UINT16 R/W	3/6/16	0-6 0:1200bps 1:2400bps 2:4800bps 3:9600bps 4:19200bps 5:38400bps	3:9600bps
PROTOCOL	0x0202 /514	UINT16 R/W	3/6/16	0-1 0:Modbus RTU 1:Modbus ASCII	0:Modbus RTU
PARITY	0x0203 /515	UINT16 R/W	3/6/16	0-2 0:None 1:Even 2:Odd	0:None Parity
DATABITS	0x0204 /516	UINT16 R/W	3/6/16	1 1:8 databits	1:8 databits
STOPBITS	0x0205 /517	UINT16 R/W	3/6/16	0-1 0:1 stopbit 1:2 stopbits	0:1 stopbit
RESPONSEDELAY	0x0206 /518	UINT16 R/W	3/6/16	0-255 for 0-2550 milliseconds	0
ACTIVEOUTPUTINTERVAL	0x0207 /519	UINT16 R/W	3/6/16	0-255 for 0-255 seconds.	0

NOTE: UINT16:16 bit unsigned integer, INT16:16bit signed integer

NOTE: RO: Register is Read Only, R/W: Register is Read/Write

NOTE: HEX is Hexadecimal (data with 0x/0X prefix), DEC is Decimal

8.3 Modbus Register Detail Description

TEMPERATURE		
Data Range	-4000~8000 For -40.00~80.00℃	Default: N/A
Power Down Save	N/A	

Note: Temperature value (Binary complement).

Example: When REGISTER = 0x0702 (HEX format), then

VALUE=(0x07*256+0x02)/100=17.94℃.When REGISTER=FF05H (HEX format),then

VALUE=((0xFF*256+0x05)-0xFFFF-0x01)/100 =(0xFF05-0xFFFF-0x01)/100=-2.51℃.

VWC ---Volmetric Water Content		
Data Range	0-10000 For 0-100%	Default: N/A
Power Down Save	N/A	

Note: Volmetric Water Content value.

Example: When REGISTER = 0x0702 (HEX format), then VALUE=(0x07*256+0x02)/100=17.94%

EC ---Electrical Conductivity		
Data Range	0-20000 For 0-20000us/cm	Default: N/A
Power Down Save	N/A	

Note: Electrical Conductivity.

Example: When REGISTER = 0x0702 (HEX format), then $VALUE = (0x07 * 256 + 0x02) = 1794 \text{ us/cm}$

SALINITY--- Salinity		
Data Range	0-20000 For 0-20000mg/L	Default: N/A
Power Down Save	N/A	

Note: SALINITY

Example: When REGISTER = 0x0702 (HEX format), then $VALUE = (0x07 * 256 + 0x02) = 1794 \text{ mg/L}$, Salinity is derived by EC, $SALINITY = EC * SALINITYCOFF$, in which SALINITYCOFF is a coefficient, please refer to SALINITYCOFF.

TDS---Total Dissolved Solid		
Data Range	0-20000 For 0-20000mg/L	Default: N/A
Power Down Save	N/A	

Note: Total Dissolved Solid

Example: When REGISTER = 0x0702 (HEX format), then $VALUE = (0x07 * 256 + 0x02) = 1794 \text{ mg/L}$, TDS is derived by EC, $TDS = EC * TDSCOFF$, in which TDSCOFF is a coefficient, please refer to TDSCOFF.

EPSILON--- EPSILON		
Data Range	88-8188 for 0.88-81.88	Default: N/A
Power Down Save	N/A	

Note: Epsilon

Example: When REGISTER = 0x0702 (HEX format), then $VALUE = (0x07 * 256 + 0x02) / 100 = 17.94$, VWC is derived by EPSILON, VWC is a function of EPSILON. This value is always used for self calibration usage.

TEMPUNIT---Temperature Unit		
Data Range	0:°C 1:°F	Default: 0
Power Down Save	YES	

Note: Temperature Unit.

ECTEMPCOFF---EC Temperature Compensation Coefficient		
Data Range	0-100 for 0.0%-10.0%	Default: 20(2%)
Power Down Save	YES	

Note: EC Temperature Compensation Coefficient

SALINITYCOFF---Salinity Coefficient		
Data Range	0-100 for 0.00-1.00	Default: 55(0.55)
Power Down Save	YES	

Note: Salinity Coefficient.

TDSOFF---TDS Coefficient		
Data Range	0-100 for 0.00-1.00	Default: 50(0.50)
Power Down Save	YES	

Note: TDS Coefficient.

MEASMUREMENTMETHOD---Measure Method		
Data Range	0: Continuous 1: Request	Default: 1
Power Down Save	YES	

Note: In Continuous mode, the sensor always convert the VWC,EC and Temperature and update the internal data and ready for reading. In Request mode, the sensor convert the VWC,EC and Temperature data by receiving the data request command from master device.

SLAVEADDRESS --- Modbus Slave Address		
Data Range	0-255	Default: 1
Power Down Save	YES	

Note: Please re-power on the sensor to take effective after set.

BAUDRATE --- Serial Comm Baudrate		
Data Range	0-5 0:1200bps 1:2400bps 2:4800bps 3:9600bps 4:19200bps 5:38400bps	Default: 3
Power Down Save	YES	

Note: Please re-power on the sensor to take effective after set.

PROTOCOL --- Serial Comm Protocol		
Data Range	0-1 0:Modbus RTU 1:Modbus ASCii	Default: 0
Power Down Save	YES	

Note: Please re-power on the sensor to take effective after set.

PARITY --- Serial Comm Parity		
Data Range	0-2 0:NONE 1:EVEN 2:ODD	Default: 0
Power Down Save	YES	

Note: Please re-power on the sensor to take effective after set.

DATABITS --- Serial Comm Databits		
Data Range	1 1:8 databits	Default: 1
Power Down Save	YES	

Note: Please re-power on the sensor to take effective after set.

STOPBITS --- Serial Comm Stopbits		
Data Range	0-1 0:1 stopbit 1:2 stopbits	Default: 0
Power Down Save	YES	

Note: Please re-power on the sensor to take effective after set.

RESPONSEDELAY --- Serial Comm Response Delay		
Data Range	0-255 for 0-2550 milliseconds, 0 for disabled	Default: 0
Power Down Save	YES	

Note: Please re-power on the sensor to take effective after set.

Note: Sensor will delay a period before response to master request command.

Example: When set to 5 and receive a request from master device, then sensor will delay $5 \times 10\text{ms} = 50\text{ms}$, then response to master.

ACTIVEOUTPUTINTERVAL --- Serial Comm Active Output Interval time		
Data Range	0-255 for 0-255 seconds, 0 for disabled	Default: 0
Power Down Save	YES	

Note: Please re-power on the sensor to take effective after set.

Note: Sensor will output the data actively without any master request command.

Note: Only ONE sensor should be on RS485 network, or there will be data collision and corrupt the data on line.

Note: Refer to SETTING mode to exit the Active Output Mode.

Example: When set to 5 then sensor will output the data every 5 seconds without any master request command.

8.4 Modbus Function Code

For description below, data started with 0X/0x means that it's in HEX format.

8.4.1 Function Code 3 Protocol Example

Master Request: AA 03 RRRR NNNN CCCC

AA	1 byte	Slave Address, 0-255
0x03	1 byte	Function Code 3
RRRR	2 byte	Starting Register Addr
NNNN	2 byte	Quantity of Register to read
CCCC	2 byte	CRC CHECKSUM

Slave Response:AA 03 MM VV0 VV1 VV2 VV3... CCCC

AA	1 byte	Slave Address,0-255
0x03	1 byte	Function Code 3
MM	1 byte	Register Data Byte Count
VV0,VV1	2 byte	Register Value (High8bits first)
VV2,VV3	2 byte	Register Value (High8bits first)
...	...	Register Value (High8bits first)
CCCC	2 byte	CRC CHECKSUM

Example: Read register 0x0200-0x0201,that is slave address and baudrate.

Master Request:01 03 0200 0002 C5B3

Slave Addr.	1 byte	0x01
Function Code	1 byte	0x03
Starting Register Addr.	2 byte	0x0200
Quantity of Register to read	2 byte	0x0002
Checksum	2 byte	0xC5B3

Slave Response:01 03 04 00 01 00 03 EB F2

Slave Addr.	1 byte	0x01
Function Code	1 byte	0x03
Register Data Byte Count	1 byte	0x04
Register Value: Address	2 byte	0x00(HIGH 8 Bits)
		0x01(LOW8 Bits)
Register Value: Baudrate	2 byte	0x00(HIGH 8 Bits)
		0x03(LOW8 Bits)

8.4.2 Function Code 4 Protocol Example

Master Request:AA 04 RRRR NNNN CCCC

AA	1 byte	Slave Address,0-255
0x04	1 byte	Function Code 4
RRRR	2 byte	Starting Register Addr
NNNN	2 byte	Quantity of Register to read
CCCC	2 byte	CRC CHECKSUM

Slave Response:AA 04 MM VV0 VV1 VV2 VV3... CCCC

AA	1 byte	Slave Address,0-255
0x04	1 byte	Function Code 4
MM	1 byte	Register Data Byte Count
VV0,VV1	2 byte	Register Value (High8bits first)
VV2,VV3	2 byte	Register Value (High8bits first)
...	...	Register Value (High8bits first)

CCCC	2 byte	CRC CHECKSUM
------	--------	--------------

Example: Read register 0x0000-0x0002,that is temperature, soil moisture, and EC.

Master Request:01 04 0000 0003 B00B

Slave Addr.	1 byte	0x01
Function Code	1 byte	0x04
Starting Register Addr.	2 byte	0x0000
Quantity of Register to read	2 byte	0x0003
Checksum	2 byte	0xB00B

Slave Response:01 04 06 08 90 0E 93 02 4E D2 57

Slave Addr.	1 byte	0x01
Function Code	1 byte	0x04
Register Data Byte Count	1 byte	0x06
Register Value: Temperature	2 byte	0x08(HIGH 8 Bits)
		0x90(LOW8 Bits)
Register Value: Soil Moisture	2 byte	0x0E(HIGH 8 Bits)
		0x93(LOW8 Bits)
Register Value: EC	2 byte	0x02(HIGH 8 Bits)
		0x4E(LOW8 Bits)
Checksum	2 byte	0xD257

Temperature =(0x08*256+0x 90)/100=2192/100=21.92℃

Soil Moisture =(0x0E*256+0x93)/100=3731/100=37.31%

EC=0x02*256+0x4E=2*256+78 =590 us/cm

8.4.3 Function Code 6 Protocol Example

Master Request:AA 06 RRRR VVVV CCCC

AA	1 byte	Slave Address,0-255
0x06	1 byte	Function Code 6
RRRR	2 byte	Register Addr (High8bits first)
VVVV	2 byte	Register Value (High8bits first)
CCCC	2 byte	CRC CHECKSUM

Slave Response:AA 06 RRRR VVVV CCCC

AA	1 byte	Slave Address,0-255
0x06	1 byte	Function Code 6
RRRR	2 byte	Register Addr (High8bits first)
VVVV	2 byte	Register Value (High8bits first)
CCCC	2 byte	CRC CHECKSUM

Example: Write Register 0x0021,that is set temperature unit to °F.

Request:01 06 0021 0001 1800

Slave Addr.	1 byte	0x01
Function Code	1 byte	0x06
Register Addr.	2 byte	0x0021 (High8bits first)
Register Value	2 byte	0x0001 (High8bits first)
Checksum	2 byte	0x1800

Response:01 06 0021 0001 1800

Slave Addr.	1 byte	0x01
Function Code	1 byte	0x06
Register Addr.	2 byte	0x0021 (High8bits first)
Register Value	2 byte	0x0001 (High8bits first)
Checksum	2 byte	0x1800

8.4.4 Function Code 16 Protocol Example

Master Request:AA 10 RRRR NNNN MM VVVV1 VVVV2 ...CCCC

AA	1 byte	Slave Address,0-255
0x10	1 byte	Function Code 0x10
RRRR	2 byte	Starting Register Addr
NNNN	2 byte	Quantity of Register to write
MM	1 byte	Register Data Byte Count
VVVV1	2 byte	Register Value(High8bits first)
VVVV2	2 byte	Register Value(High8bits first)
...	...	Register Value(High8bits first)
CCCC	2 byte	CRC CHECKSUM

Slave Response:AA 10 RRRR NNNN CCCC

AA	1 byte	Slave Address,0-255
0x10	1 byte	Function Code 0x10
RRRR	2 byte	Starting Register Addr
NNNN	2 byte	Quantity of Register to write
CCCC	2 byte	CRC CHECKSUM

Example: Write Register 0x0200-0x0201,that is set slave address to 1,and baudrate to 19200bp.

Master Request:01 10 0200 0002 04 0001 0004 BACC

0x01	1 byte	Slave Addr.
0x10(HEX)	1 byte	Function Code 0x10
0x0200	2 byte	Starting Register Addr
0x0002	2 byte	Quantity of Register to write
0x04	1 byte	Register Data Byte Count
0x0001	2 byte	Register Value: Slave Address 1
0x0004	2 byte	Register Value: Baudrate 19200bps
0xBACC	2 byte	CRC CHECKSUM

Salve Response:01 10 0200 0002 4070

0x01	1 byte	Slave Addr.
0x10(HEX)	1 byte	Function Code 0x10
0x0200	2 byte	Starting Register Addr(High8bits first)
0x0002	2 byte	Quantity of Register to write(High8bits first)
0x4070	2 byte	CRC CHECKSUM

Appendix

Copyright and Trademark

This document is copyrighted, 2019, by Beijing Jingelway Sci-Tech Co.,Ltd. All rights are reserved. Beijing Jingelway Sci-Tech Co.,Ltd. reserves the right to make improvements to the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission. Information provided in this manual is intended to be accurate and reliable. However, Beijing Jingelway Sci-Tech Co.,Ltd. assumes no responsibility for its use, nor for any infringements upon the rights of third parties, which may result from its use.